

Xgig[®] Fibre Channel Load Tester

Benefits

Key Features

- Full line rate traffic generation and load testing at 1/2/4/8/16G Fibre Channel
- Supports FCoE topology (with FCoE Load Tester ports)
- Up to 255 NPIV
- Up to 64 time-sync ports for high resolution latency measurement 10 ns latency accuracy
- Flexible traffic patterns
- Error generation
- C/C++/Tcl APIs for creating automated test scripts
- Extensive statistical reports with error counters
- Large capture buffer size of 256 MB per load tester port
- F_port emulation
- Ability to emulate fiber-pull and verify high availability feature (failover time measurement)

Applications

- Verify functional switch control planes
- Test switch interoperability
- Test switch performance
- Stress-test the switch
- Bring up ASIC

- Guarantees line rate traffic in most stressful test environments
- Integrates verification of Fibre Channel functionality with large-scale network performance testing
- Measures high-resolution latency with the utmost accuracy
- Enables automated testing
- Captures control frames and triggers Xgig Analyzer to analyze the root-causes of link issues
- Tests on FCoE to FC topology with Xgig FCoE Load Tester
- Affordable

A key aspect of verifying the reliability of Fibre Channel equipment is to stress-test the network with traffic at and above the maximum legal data rate. The Xgig Fibre Channel Load Tester eliminates having to create complex test setups comprising multiple servers and storage arrays by enabling users to construct fully meshed data communication topologies, generate traffic loads, and monitor both transmitted and received data streams. With effortless comprehensive analysis and statistical capabilities, the Xgig Fibre Channel Load Tester is the ideal tool for testing Fibre Channel fabrics and switches for performance, data integrity, robustness, flexibility, and scalability.

Overview

The Xgig Fibre Channel Load Tester brings essential Fibre Channel traffic generation capabilities to the Xgig Unified Protocol Analysis and Test platform, the industry's only complete protocol testing suite that supports multiple protocols and test functions in one chassis. The Xgig Fibre Channel Load Tester is also the first generation tool with a high speed 14 Gbps Fibre Channel (16 GFC) protocol available on the market.

Eight powerful traffic profile engines assigned to each physical Xgig port enable the load tester to transmit various traffic patterns at and above the maximum legal data rate of as high as 14 Gbps (16 GFC) to simulate extreme traffic conditions. Optimal for testing and verifying switch and fabric scalability, flexibility, robustness, and performance, the Xgig Load Tester offers a cost-effective alternative for high-port-count switch testing scenarios that otherwise require many expensive servers and storage arrays.

By emulating N_Port and/or N_Port ID Virtualization (NPIV) behaviors, with up to 255 NPIV ports for each physical port, the Xgig Load Tester can conduct fabric and port login processes and can configure a variety of port topologies among ports in the same zone to also test fabric and switch virtualization features. While the load tester offers dramatic flexibility for complicated traffic topologies, configuring tests are simple and smooth using the intuitive graphical user interface (GUI).

The Xgig Load Tester monitors both transmitted and received traffic, provides comprehensive throughput statistics for each physical or virtual port, and alerts users to data stream errors. Users can view traffic statistics either per port or per stream in intuitive spreadsheet format to identify and resolve network issues. Also, users can automate complex testing processes using application programming interfaces (APIs). The statistics are automatically saved to a .csv file for easy data processing later.

The Xgig Load Tester is compatible with other Xgig functions, such as the analyzer, jammer, and bit error rate test (BERT), and automatically triggers the analyzer to capture problematic traces when it detects any out-of-order, dropped, or missing frame or any sequence error in any of the thousands of data streams being generated. Captures of this type are not easily set up with the analyzer alone because it does not track the frame sequence count. In addition, users can capture the control frames from the load tester directly and view the traces in the .CAP format that they can then view with the Xgig TraceView or Wireshark.

Load Tester Setup Example

The load tester, combined with other JDSU testing tools, offers a complete test solution for simulating a real Fibre Channel network without requiring expensive servers and storage arrays, thus providing significant savings in terms of rack space, power, cabling, and equipment cost.

Figure 1 shows an example setup with the Xgig Load Tester blasting Fibre Channel frames into the Fibre Channel fabric while at the same time, the Medusa Lab Test Tools (MLTT) drive real, high input/output operations per second (IOPS) traffic at the host side to the target across the fabric. Xgig Analyzer ports are positioned in line for debugging network problems that the load tester, MLTT, and/or the analyzer itself detect. The Xgig Jammer injects errors into traffic to emulate network "corner behavior" and performs functional tests that complement the load tester's load testing. (For more information about these other protocol test tools, please refer to the individual data sheets for these products.)

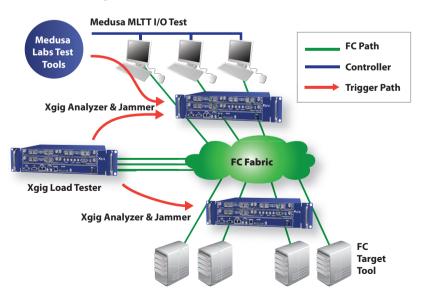


Figure 1: Example setup with the Xgig Load Tester and JDSU Medusa Labs™ Tools for testing Fibre Channel fabric performance.

Configuration

A simple, three-step process (shown in Figure 2) configures the Xgig Load Tester, even for the most complex topologies and traffic patterns.

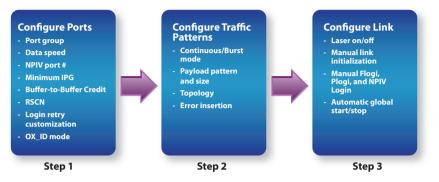


Figure 2: Configuring Xgig Load Tester with a simple three-step process



Figure 3: External trigger for connecting the Xgig Analyzer

oit Window Help									
of Phone Calland	ada								
115				ner 1 (a Elapsed 000801	10	10			TT Ver
répador •				Jun 1 C s Elapord 000001	Speed 4		6 CVP		- Ves
- RK									
			-						
.078	R. For cred	 Value: Solic 	Tradpit Lite	or Enos Ethemat Charbers 1	COPINIER Control				
Physical Parts									
				tes V Datalits V frames			Inched Parent 1		7 Paceliune
N.M.M.	25.016	1942.533	126640.226 22117	361.000 1.795.540.290.794	105,058,054	16.5	0.000	NA	
10,311,23	96.975	3,142,121		571056 1,795,204,504,440	105.658.640	NA	0.000	NA	
K.HU.R	95.416	2147.332		727.362 1.795.117.815.980	105.658.490	NA		NA	
PLACK, N	26.4%	1947.932	106.655.557 222.14	58.84 176.95.24.92	105.658,292	NA		NA	
	- [mm] [mm]		Latercy Drops						
		sen j satasse	Canal Gunz						
Steams (LTSV_2)									
				or Enou V Durch Orde Frances V L					
	2.02	2.30	2.65			10500 Ox110430		NA NA	3,708,544
,	2.0	2.90	34.60	6 6		12500 Over16430		NA NA	1,101.544
- 2	2.37	210	30.60	e e		0500 04010430		NA NA	5,106,521
2	2.12	4.72	36.60	0 0		0500 0410430		NA NA	1,181,612
*	7.07	4.5	X.60	6 6				NA NA	1.106512
0	2.82	4.5	36.60	0 0				NA NA	1,108,512
4	2,17	4.5	32.42	0 0		0500 0410400		NA NA	1.101512
7	2.17	4.5	36.60	0 0		0500 Ox10430		NA NA	3,106,512
8	2.37	4.87	30.42	0 0		0500 Ox10430		NA NA	1,100,010
2	2.17	4.5	X-60	0 0		0500 0416480		NA NA	1,986,952
10	7.97	4.8	2.42	0 0		0600 0410430		NA NA	1,105,912
	2.37	4.87	30.60	0 0		0500 Ox10430		NA NA	1,101.512
						N5X 0416436		NA NA	1,101512
18									1,108.512
12	7.12	4.37	30.60	0 0		0500 0410430			
10	3.12	4.3° 4.3°	36.60	6 6	0 04	0500 04010400	0-2445	NA NA	1,164,612
14 15	1.12	43 ⁰ 43 ⁰ 43 ⁰	X-42 36.60	6 0 6 0		0500 0x010430 0500 0x010430	0.2445	NA NA	1,106.512
12 13 14 15	19 19 19 19	45° 45° 45° 45°	X-62 X-60 X-60	6 6 6 6	0 0 0 0 0 0	0500 General 0500 General 0500 General	042445 042582 042532	NA NA NA NA	1,108.512
12 10 14 15 16	7.12 7.12 7.12 7.12 7.12 7.12	63° 63° 63° 63°	X-60 X-60 X-60 X-60 X-60	9 9 9 9 9 9 9 9 9 9	e e e e e	0500 General 1500 General 1500 General 1500 General	0-0445 0-258 0-2537 0-2537	NA NA NA NA NA NA NA NA	1.188.512 1.188.612 1.188.612
12 13 14 15 16 17	7.10 7.10 7.10 7.10 7.10 7.10 7.10	63° 63° 63° 63° 63° 63°	X-60 X-60 X-60 X-60 X-60 X-60	6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	see	0500 04710430 0500 04710430 0500 04710430 0500 04710430 0500 04710430	0.045 0.058 0.007 0.070 0.070	6.5 N.5 6.5 N.5 6.5 N.5 6.5 N.5 8.5 N.5	1.186.512 1.186.512 1.186.512
12 53 14 55 16 17 10	7 12 7 12 7 12 7 12 7 12 7 12 7 12 7 12	63° 63° 63° 63° 63° 63° 63°	X 40 X 40 X 40 X 40 X 40 X 40 X 40 X 40	9 9 9 9 9 9 9 9 9 9	s s s s s s s s s s s s s s s s s s s	0000 0w10430 0000 0w10430 0000 0w10430 0000 0w10430 0000 0w10430 0000 0w10430	042445 04258 04270 042720 042723 042723	NA NA NA NA NA NA NA NA NA NA	1.186.512 1.186.512 1.186.512 1.186.512 1.186.512
12 53 55 55 55 55 55 55 55 55 55 55 55 55	7.37 7.37 7.37 7.37 7.37 7.37 7.37 7.37	635 635 635 635 635 635 635 635 635 635	X 60 X 60 X 60 X 60 X 60 X 60 X 60 X 60	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	00000000 2888888		0x2445 0x258 0x257 0x270 0x273 0x273 0x273 0x270 0x270 0x290		5.986592 5.986592 5.986592 5.986592 5.986592 C-966592
12 13 14 15 15 16 17 18 18 28 20 27	3 32 3 32	6.35 6.35 6.35 6.35 6.35 6.35 6.35 6.35	X 60 X 60 X 60 X 60 X 60 X 60 X 60 X 60	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	0000 04/1442 0000 04/1442 0000 04/1442 0000 04/1442 0000 04/1442 0000 04/1442 0000 04/1442	6.2445 6.258 6.2537 6.2700 6.2753 6.2700 6.2753 6.2700 6.2700 6.2700 6.2700	No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h. No.h.	5.98.592 5.98.692 5.98.692 5.98.692 5.98.692 5.98.692 5.98.692
12 13 14 15 15 10 10 10 10 10 10 10 10 10 10 10 10 10	7.37 7.37 7.37 7.37 7.37 7.37 7.37 7.37	6.5 4.8 4.8 4.5 4.5 4.5 4.5 4.5 4.5 4.5 4.5	X.6 X.6 X.6 X.6 X.6 X.6 X.6 X.6 X.6 X.6			000 04/148 000 04/148 000 04/148 000 04/148 000 04/148 000 04/148 000 04/148 000 04/148 000 04/148	0.2405 0.258 0.237 0.2723 0.2723 0.2723 0.2725 0.2759 0.2759 0.2759 0.2759 0.2759 0.2759 0.2759 0.26559 0.26559	KA	5.98.592 5.98.692 5.98.692 5.98.692 5.98.692 5.98.692 5.98.692 5.98.692
12 13 14 15 15 16 15 16 15 16 16 15 16 16 17 16 16 17 16 16 17 16 16 16 16 16 16 16 16 16 16 16 16 16	7.32 7.32 7.32 7.32 7.32 7.32 7.32 7.32	6.25 6.25 6.25 6.25 6.25 6.25 6.25 6.25 6.25 6.25 6.25 6.25 6.25	X.6 X.6 X.6 X.6 X.6 X.6 X.6 X.6 X.6 X.6		00000000000000000000000000000000000000	000 0x11440	6.2405 6.258 6.257 6.2725 6.2725 6.2705 6.2705 6.2905 6.2405 6.2405 6.2405	10.000 0000 0000 0000 0000 0000 0000 00	5.188.512 5.188.612 5.188.612 5.188.612 5.188.612 5.188.612 5.188.612 5.188.612
	7.32 7.32 7.32 7.32 7.32 7.32 7.32 7.32	63 63 63 63 63 63 63 63 63 63	X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6		0 000 0 000 0 000 0 000 0 000 0 000 0 000 0	000 Outroals 000 Outroals	6.2405 6.258 6.257 6.270 6.270 6.270 6.299 6.3428 6.3428 6.3420 6.3450 6.3255	14.6. 14.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6.	1.081502 5.081602 1.081502 5.081502 5.081502 5.081502 5.081502 5.081502 5.081502
	7.10 7.10 7.10 7.10 7.10 7.10 7.10 7.10	42 42 42 42 42 42 42 42 42 42 42 42 42 4	X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6		00000000000000000000000000000000000000	000 Outroals	6,240 6,257 6,270 6,270 6,270 6,270 6,270 6,270 6,270 6,240 6,277 0,274	14.6. 14.6. No.6. 14.6.	5.986592 5.986592 5.986592 5.986592 5.986592 5.986592 5.986592 5.986592 5.986592 5.986592
	7.32 7.32 7.32 7.32 7.32 7.32 7.32 7.32	63 63 63 63 63 63 63 63 63 63	X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6 X-6			NX Artista	0-244 0-298 0-279 0-275 0-275 0-275 0-275 0-275 0-275 0-2450000000000000	14.6. 14.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6. 16.6.	1.081502 5.081602 1.081502 5.081502 5.081502 5.081502 5.081502 5.081502 5.081502

Figure 4: RX Traffic View

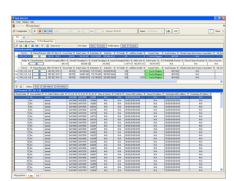


Figure 5: TX Traffic View

Using the Load Tester to Trigger Xgig Functions

The Xgig Load Tester shares the same hardware, therefore, it is fully compatible with other Xgig functions—analyzer, jammer, and BERT. The Xgig Load Tester can trigger analyzer ports that are connected to the load tester through the trigger port on the Xgig chassis, as shown in Figure 3, which is extremely useful to users because even when the analyzer is positioned in line to monitor and capture traffic, it does not know what sequences to expect and cannot detect mismatches. The load tester generates the traffic; therefore, it can accurately detect missing frames and trigger the analyzer to begin or to stop filling the trace buffer.

This distinctive feature also enables the ports of the load tester to further separate the events of dropped, out-of-order, and misdirected frames, providing more thorough and accurate measurements of switch performance.

To facilitate user debugging of error events in the captured trace, the Xgig Load Tester lists key information, such as the S_ID, D_ID, SEQ_CNT, and OX_ID. Additionally, any information in the trigger frame can be used to set up the search/filter in the analyzer TraceView to quickly locate trigger events, such as out-of-order, dropped, and misdirected frame errors, as well as CRC (cyclic redundancy check) errors.

Traffic Statistics

The Xgig Load Tester monitors received (RX) (see Figure 4) and transmitted (TX) traffic (see Figure 5) to provide comprehensive statistical information through a variety of spreadsheet pane views. On the TX side, port-based and traffic-pattern-based views show statistics such as TX data frames (byte, frame), actual/average bandwidth (MBps), actual/average data rate, and login frame count. On the RX side, port-based and stream-based views show statistics such as min/average/max latency, RX data frames (byte, frame), max/actual data rate, S_ID/D_ID, OX_ID, and error counters for code violations, CRCs, disparity errors, and dropped, out-of-order, and misdirected frames, as well as sequencing errors.



Automating Testing

All load tester functions and configurations can be configured through APIs to customize and automate testing using scripts written in C/C++ and TCL/TK. Automated testing eliminates time-consuming configuration and management of tests, enabling users to easily repeat tests or perform regression testing, an especially critical capability for manufacturing test setups.

Maestro Software

Users can configure the Xgig Load Tester with JDSU Maestro Software using the same GUI they use to manage other Xgig functions, thus eliminating having to switch between different GUIs when using multiple tools. Other Xgig functions that Maestro supports include the protocol-based Fibre Channel and Gigabit Ethernet BERT, the Fibre Channel and 10G Ethernet Load Tester, the 10G Ethernet Delay Emulator, the SAS/SATA Jammer (error injection), and the SAS/SATA Generator. Xgig Maestro operates under Windows 2000, Windows XP, Windows Server 2003, Windows Vista (Business and Ultimate version), and Windows 7 (Business and Ultimate version).

Specifications

Features	Specification		Burst
Line rate	1.0625, 2.125, 4.25 Gbps Fibre Channel on the 4G Fibre Channel blade; 1.0625, 2.125, 4.25 or 8.50 Gbps Fibre Channel on the 8G	Stream capacity	1024 TX streams with S_ID and D_ID variations per tester port 8 different traffic patterns per load tester port
	Fibre Channel blade; 14.025 Gbps Fibre Channel on the 16G Fibre Channel blade	Data frame payload	8+ fixed payload patterns (e.g., CJTPAT, CRPAT) FLOGI frame blasting (Error mode)
Class of services	Class 3	Port topology	Fixed/random payload size within definable range Point-to-point
Port type	N_Port; NPIV port (Up to 255 virtual ports with each physical port) F_Port;	(per traffic pattern)	Partially meshed Fully meshed
Inter-packet-gap (IPG)	Adjustable from 3 to 65535 (64K)	Flow control	Configurable buffer-to-buffer credits from 0 to 256
······ F-···· J-F (·· -)	Adjustable from 4 to 65535 (64K) for 16G speed	OX_ID (Single/Multi-Exchange)	Fixed and unique per stream on each port (ISL Test
Data rate adjustment	Adjustable from 0 to over 100% of theoretical line rate (IPG=6)		Random within definable range Incrementing within definable range
	Data rate dynamically adjustable per each traffic	Error injection	CRC errors; SOF/EOF errors; zero payload; oversized
	configuration	Measurement	TX frames, MBytes, data rate, utilization
Link service configuration	Automatic login process;		RX frames, MBytes, data rate, min/max/average lat
-	Customized login re-try count/frequency	Error counters	Sequence errors
FCP Session	Name Server Registration RFT_ID		Out-of-order frame errors
	Discovery GID_PT		Dropped frame errors
	LISM, automatic and user control (OLS, LR)		Misdirected frame errors
	Error recovery procedure		Code violations
	RSCN		CRC errors
Stream mode	Continuous		Running disparity errors
		Trigger	TTL trigger output on detected errors
		Capture buffer	256 MB per load tester port

C/C++, TCL

Test & Measurement Regional Sales

NORTH AMERICA	ASIA PACIFIC	EMEA	WEBSITE: www.jdsu.com/snt
TEL: 1 888 746 6484 sales-snt@jdsu.com	apacsales-snt@jdsu.com	emeasales-snt@jdsu.com	

Automation